


Parts Breakdown

Model GR-IT-0300-H 45404


Base Unit

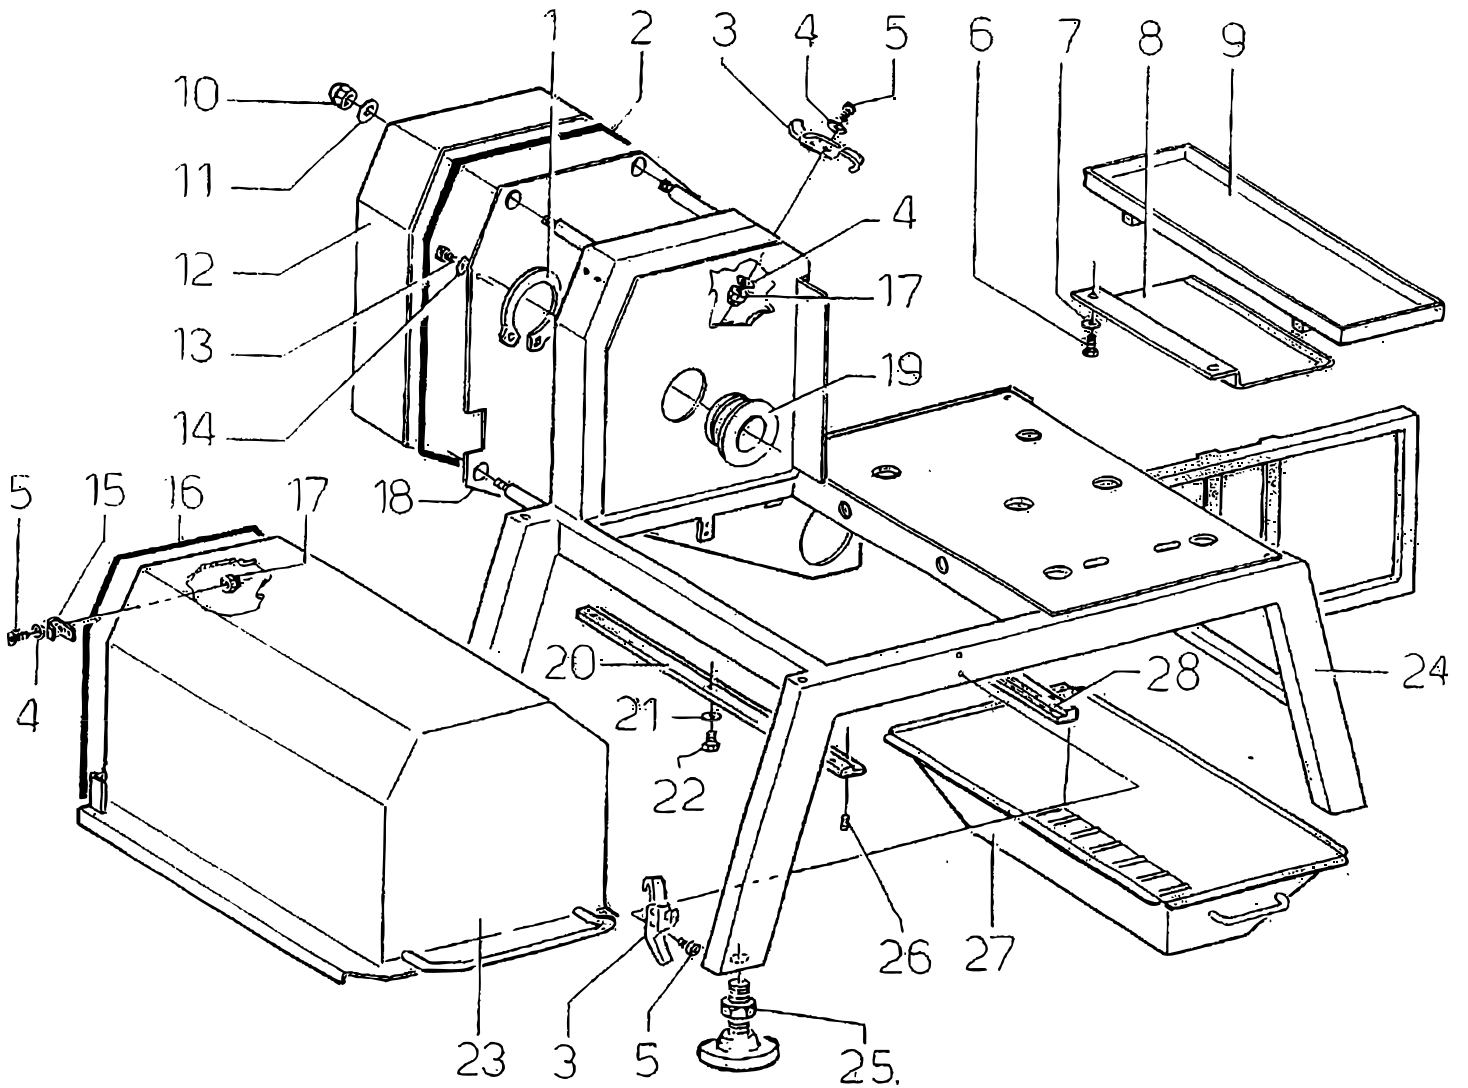

Parts Breakdown

Model GR-IT-0300-H 45404


Drum and Drum Driving Unit

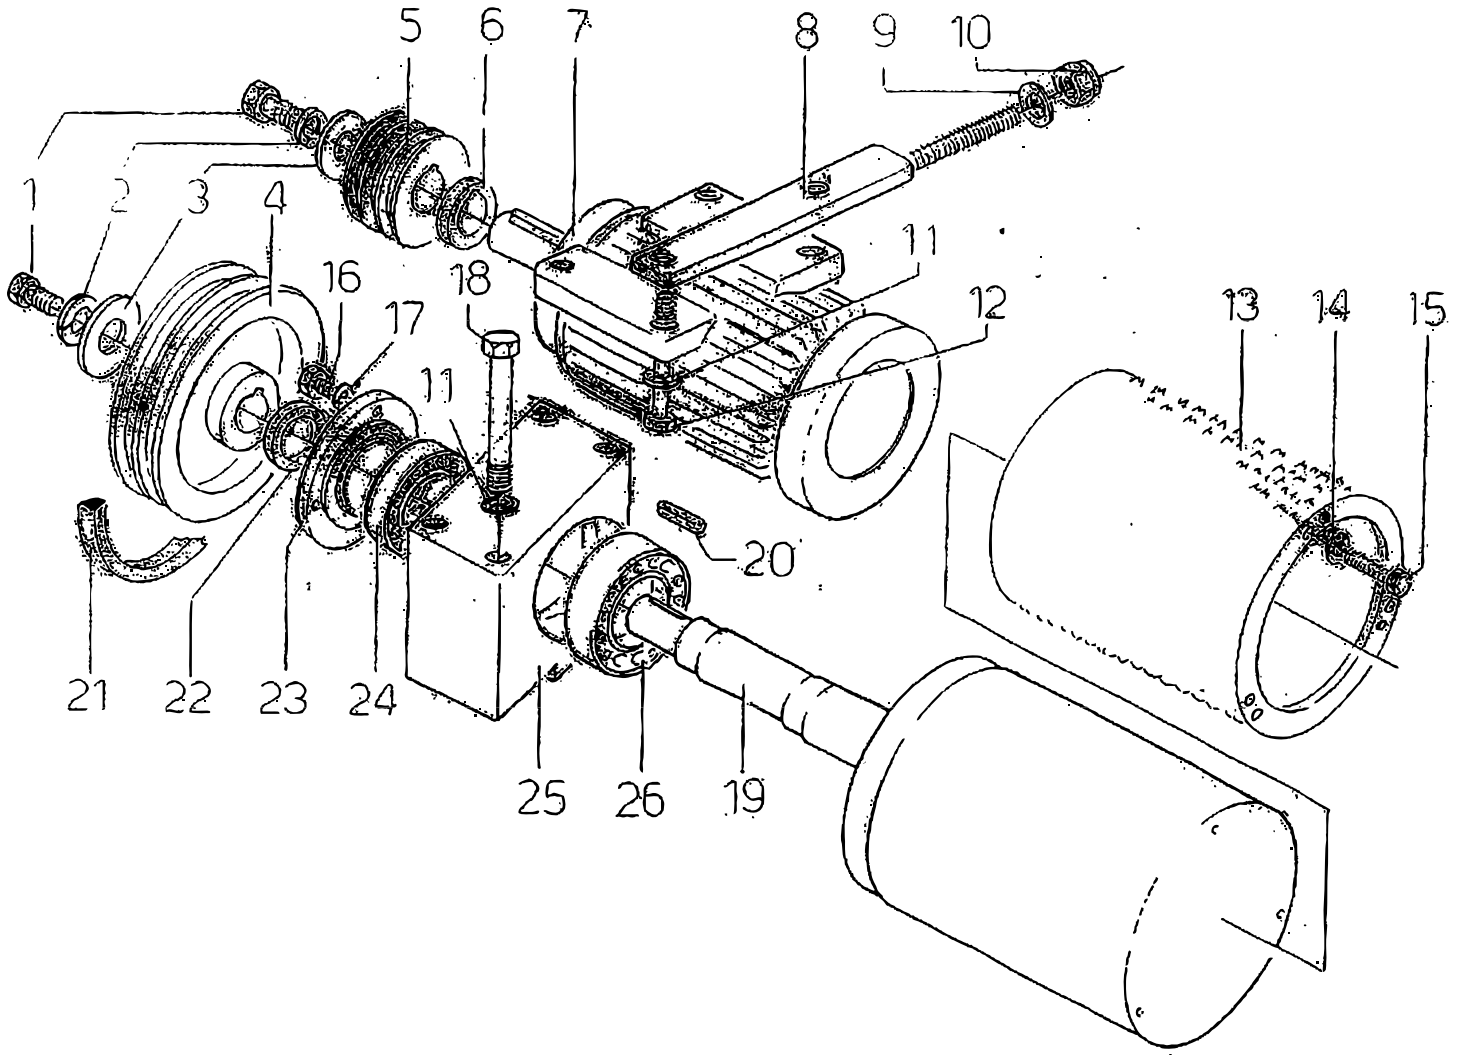

Parts Breakdown

Model GR-IT-0300-H 45404

Loading Hopper Unit

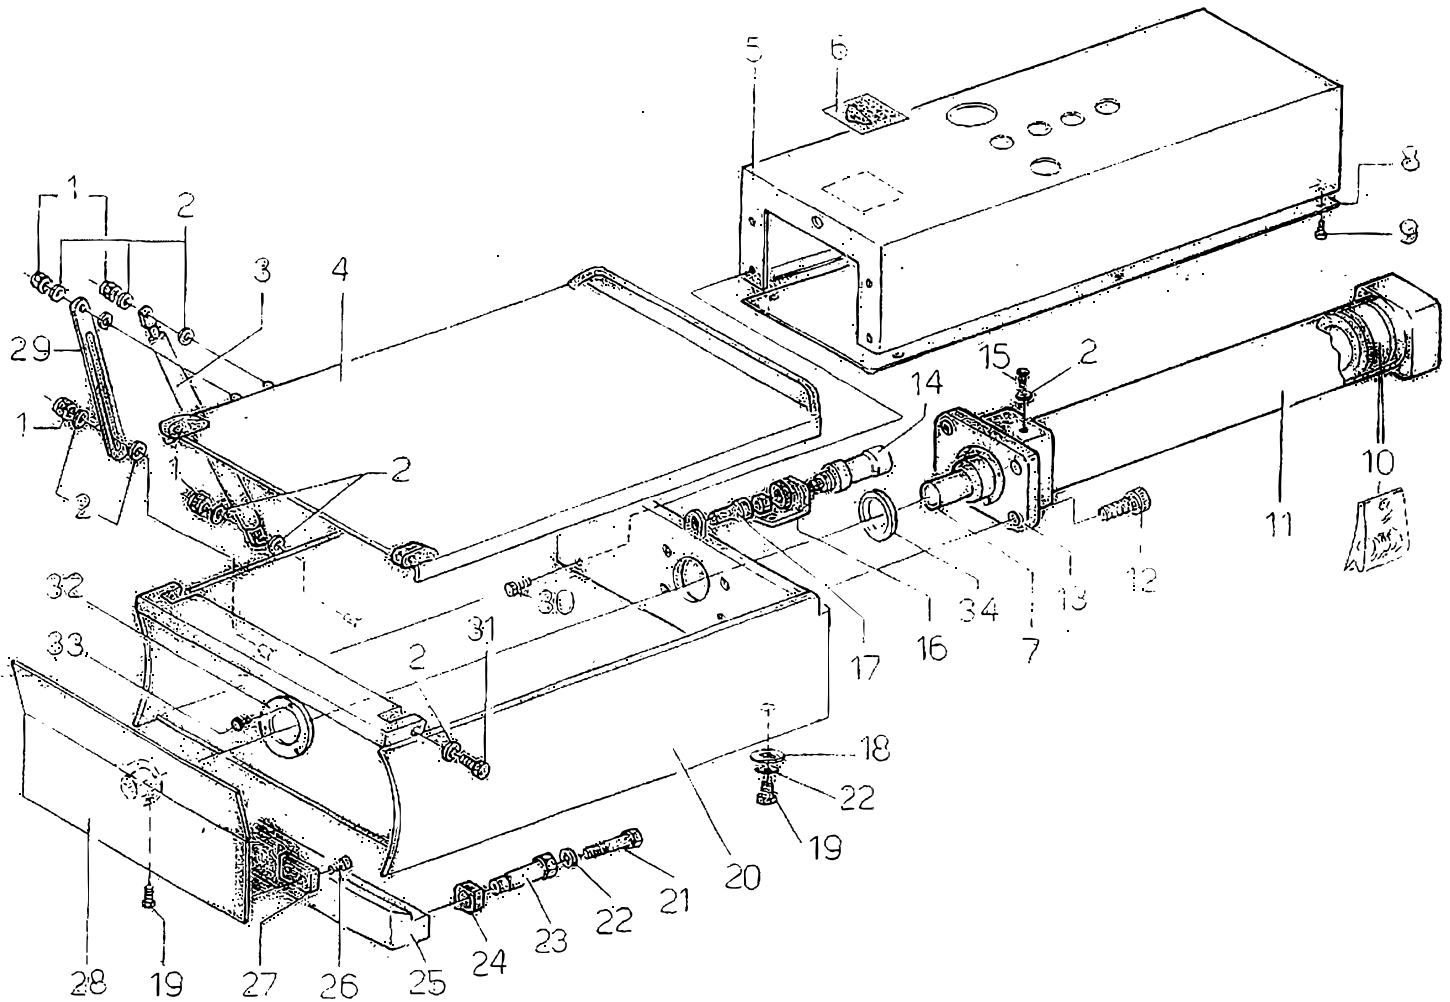

Parts Breakdown

Model GR-IT-0300-H 45404

Base Unit

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
AJ817	Retaining Ring for Shaft D.90 for 45404	1	AJ706	Blind Nut M10 for 45404	10	AJ827	Wall Ring for 45404	19
AJ818	Gasket for 45404	2	AJ822	Flat Washer D.10 for 45404	11	AJ828	Rail for 45404	20, 28
AJ819	Protex Fastener for 45404	3	AJ823	Cover for 45404	12	AJ829	Elastic Washer A 8.4 for 45404	21
AJ715	Flat Washer D.4.3 for 45404	4	AJ709	Cheese-Headed Socket Head Screw M5x16 for 45404	13	AJ721	Hex. Head Screw M8x20 for 45404	22
AJ716	Cross Head Screw M4x10 for 45404	5	AJ824	Flat Washer D.5 for 45404	14	AJ830	Casing for 45404	23
AJ732	Hex. Head Screw M6x10 for 45404	6	AJ713	Protex Stop for 45404	15	AJ831	Base Unit for 45404	24
AJ722	Elastic Washer A 6.4 for 45404	7	AJ825	Gasket for 45404	16	AJ832	Anti-Slip Articulated Foot for 45404	25
AJ820	Tank Support for 45404	8	AJ736	Self-Locking Nut M4 for 45404	17	AJ833	Hex. Sock. Headless Screw M8x16 for 45404	26
AJ821	Collecting Tank for 45404	9	AJ826	Cover for 45404	18	AJ834	Discharging Hopper for 45404	27

Drum and Drum Driving Unit

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
AJ835	Hex. Head Screw M10x30 for 45404	1	AJ843	Self-Locking Nut M10 for 45404	10	AJ851	Drum for 45404	19
AJ802	Elastic Washer A 10.5 for 45404	2	AJ844	Elastic Washer A 13 for 45404	11	AJ852	Tab A 12x8x50 for 45404	20
AJ836	Washer for 45404	3	AJ845	Hex. Head Screw M12x70 for 45404	12	AJ853	Spacer for 45404	22
AJ837	Pulley for 45404	4	AJ846	Grating Belt for 45404	13	AJ854	Cover for 45404	23
AJ838	Pulley for 45404	5	AJ829	Elastic Washer A 8.4 for 45404	14	AJ855	Bearing 110x60x28 for 45404	24
AJ839	Spacer for 45404	6	AJ847	Hex. Head Screw M8x30 for 45404	15	AJ856	Support for 45404	25
AJ840	Self-Braking Motor Sew HP 5.5 kW for 45404	7	AJ848	Hex. Head Screw M6x16 for 45404	16	AJ857	Bearing 125x70x31 for 45404	26
AJ841	Tie Rod for 45404	8	AJ849	Elastic Washer A 6.4 for 45404	17			
AJ842	Flat Washer D.10 for 45404	9	AJ850	Hex. Head Screw M12x210 for 45404	18			

Parts Breakdown

Model GR-IT-0300-H 45404

Loading Hopper Unit

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
AJ781	Self-Locking Nut M8 for 45404	1	AJ864	Flange for Stem D.25 for 45404	13	AJ804	Slide for 45404	24
AJ782	Flat Washer D.8.4 for 45404	2	AJ794	ISO 6432 Metalwork Cylinder D.25-C-50 for 45404	14	AJ806	Blade for 45404	25
AJ783	Gas Spring Inox 400N C.100 for 45404	3	AJ743	Cheese-Headed Socket Head Screw M8x20 for 45404	15	AJ868	Hex. Head Screw M6x40 for 45404	26
AJ858	Cover for 45404	4, 8	AJ865	Cylinder Fastening for 45404	16	AJ808	Slide for 45404	27
AJ859	Cylinder Cover for 45404	5	AJ796	Pin for 45404	17	AJ869	Pressure Plate for 45404	28
AJ787	Pictogram for 45404	6	AJ797	Washer for 45404	18	AJ811	Hopper Lid Stop for 45404	29
AJ860	Cylinder Stem for 45404	7	AJ798	Hex. Head Screw M10x20 for 45404	19	AJ812	Hex. Head Screw M8x30 for 45404	30
AJ716	Cross Head Screw M4x10 for 45404	9	AJ866	Hopper for 45404	20	AJ813	Hex. Head Screw M8x50 for 45404	31
AJ861	Cylinder Seal Kit D.80-25 for 45404	10	AJ801	Hex. Head Screw M10x100 for 45404	21	AJ870	Gasket Seal for 45404	32
AJ862	Metalwork Cylinder CMW1-080500.A for 45404	11	AJ867	EL. Washer A 10.5 for 45404	22	AJ815	Flat Head Countersunk Socket Cap Screw M4x10 for 45404	33
AJ863	Cheese-Headed Socket Head Screw M12x30 for 45404	12	AJ803	Eccentric Pin for 45404	23	AJ871	Stem Scraper Gasket for 45404	34